


# THE NAME OF QUALITY ARCHITECTURAL HARDWARE

### FITTING INSTRUCTIONS

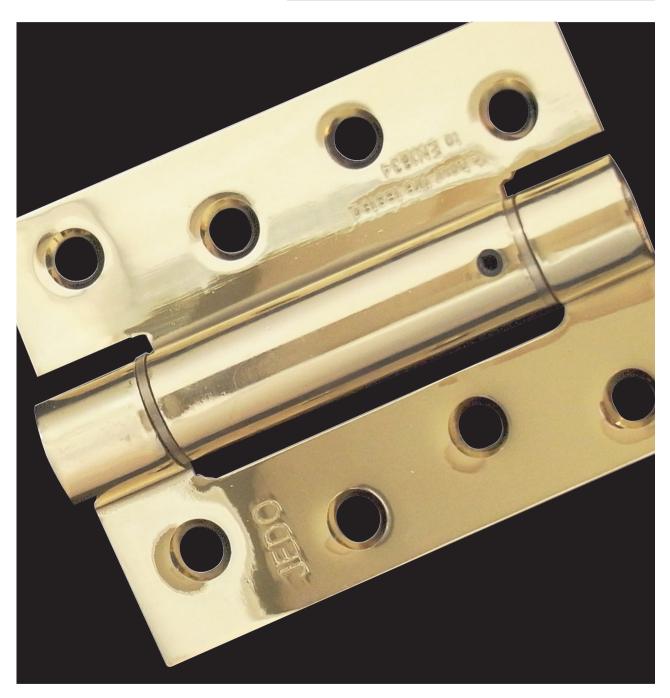

**SPRING HINGE 19800** 

www.frelan.co.uk



## Fitting instructions SPRING HINGE J9800

#### STEP 1

Fit first hinge 150mm from top of the door. Make sure adjustment hole is on the top.

#### STEP 2

Position second hinge 150mm from the top hinge.

#### STEP 3

Position third hinge 300mm from the bottom of the door.

#### STEP 4

Place alun key into locator hole at the top of the hinge barrel and crank round until the desired tension is reached. There are 6 tension positions.

#### STEP 5

Place the pin into the hole. Make sure you push it all the way in.

#### STEP 6

Repeat step 5 with the bottom hinge. Make

sure you make tension the same as the top hinge by cranking round to the same tension hole.

NB: Leave the middle hinge unsprung

